


# GAUGE WHEEL STOPS

JOHN DEERE 7000 | KINZE 2000



## STEP 1


### REMOVE GAUGE WHEEL

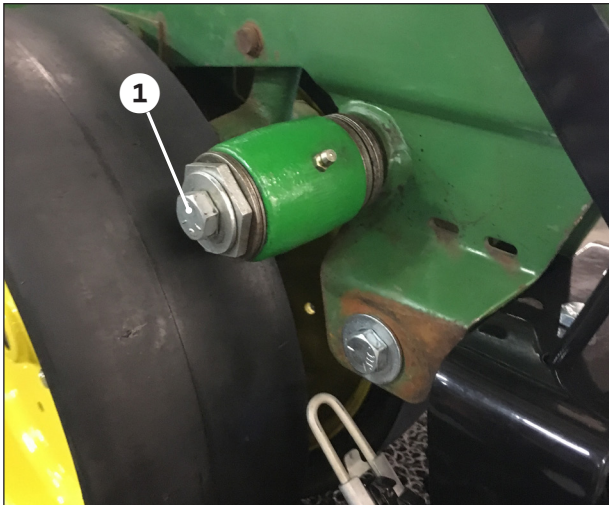

Remove one gauge wheel by loosening and removing the bolt ① with a 3/4" socket.

## STEP 2

### INSTALL GAUGE WHEEL STOP

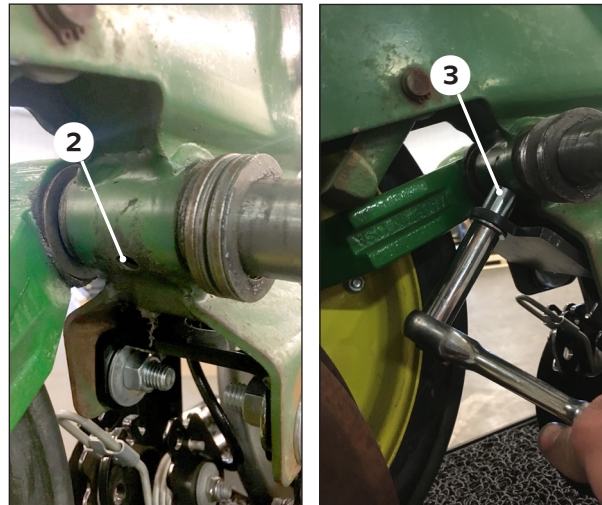

Using the hole on the bottom side of the shank ②, install the gauge wheel stop and spacer ③ using the 1-1/2" bolt and lock washer.

Tighten with 9/16" socket.

**NOTE:** It may be necessary to hold up the other gauge wheel while installing the gauge wheel stop.

## STEP 3

### REINSTALL GAUGE WHEEL



Reinstall the gauge wheel and adjust depth appropriately.