

360 WAVE

360

— : —



360 WAVE™

INSTALLATION INSTRUCTIONS
JOHN DEERE MAXEMERGE MODELS
WITHOUT 360 BANDIT



360YIELDCENTER.COM

FOR QUESTIONS PLEASE CONTACT OUR
PRODUCT SUPPORT TEAM AT 309-300-3120

3.11.20 • V2

All trademarks are the property of 360 Yield Center, its affiliates and/or its licensors. ©2020 360 Yield Center. All rights reserved.



INSTALLATION INSTRUCTIONS

JOHN DEERE MAXEMERGE WITHOUT BANDIT



STEP 1

PREPARE THE ROW UNIT

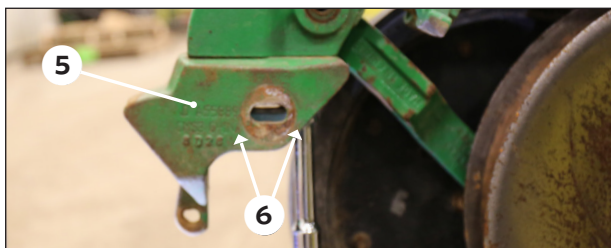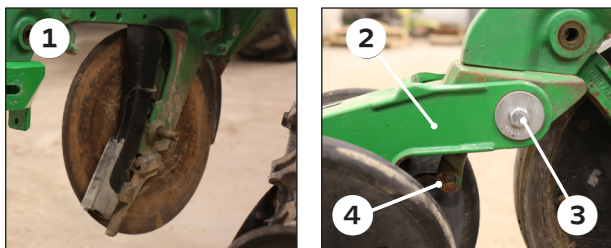



Remove both gauge wheels and the right-side opening disk **1**.

Remove closing wheel assembly **2** by removing hardware **3** and unhook the spring **4**. Retain hardware.

Remove closing casting **5** by removing (2) bolts **6**.

STEP 2


INSTALL NEW CLOSING CASTING

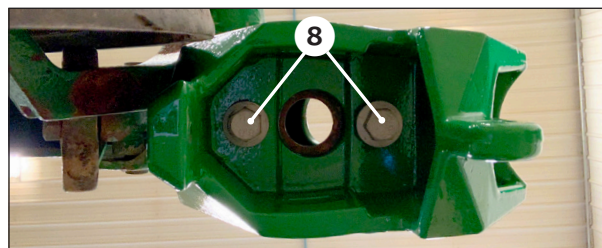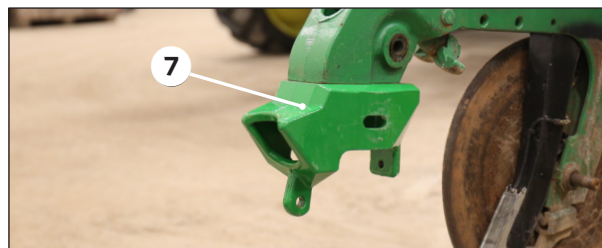

Install the new closing casting **7** and secure using the (2) bolts **8** provided.

STEP 3

INSTALL WAVE ASSEMBLY

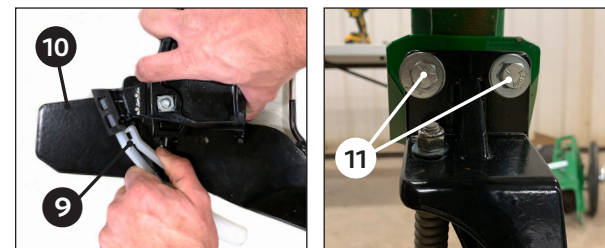

Install firmer **9** on the wave assembly **10** by pinching the top of the firmer together and slide it into place.

Install the WAVE assembly on the closing casting using the provided hardware. Two bolts will be inserted on the front **11** and one on the back **12** of the assembly.

NOTE: When installing the WAVE assembly ensure the blade trash guard is flush against the seed tube protector **13**.


INSTALLATION INSTRUCTIONS

JOHN DEERE MAXEMERGE WITHOUT BANDIT



STEP 3

INSTALL PLUMBING

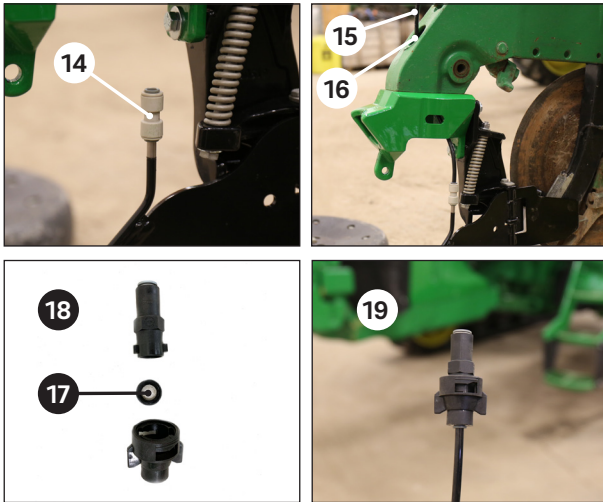

Install the push-to-connect fitting **14** on the liquid tube on WAVE assembly.

Route the 1/4" push-to-connect line **15** through the hole **16** on the row unit and connect it to the push-to-connect fitting just installed.


Assemble the orifice into the rubber grommet **17**.

Assemble the three plumbing components in the arrangement shown above **18**.

Attach the plumbing assembly to the other end of the 1/4" line **19**. Secure the line to the row unit using zip ties as you see fit.

STEP 4

REINSTALL GAUGE WHEELS AND DISK

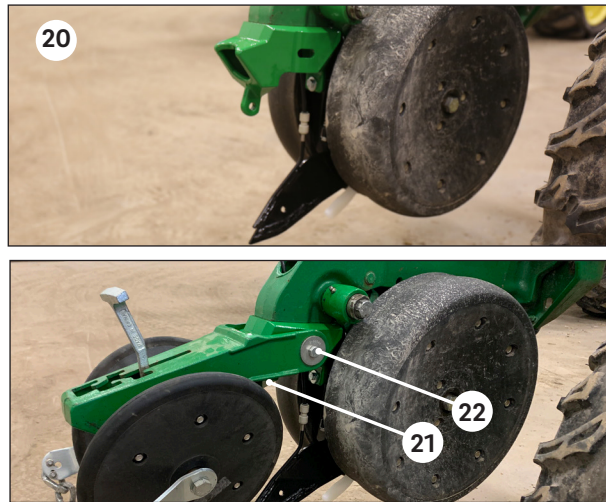

Reinstall right side disk and both gauge wheels using original hardware **20**.

Reinstall the closing system assembly by reconnecting the spring **21** and then using the previously removed hardware **22** to secure the closing system assembly to the closing casting.

INSTALLATION COMPLETE

