




# 360 RAIN® KEYPAD ICONS WHAT THEY MEAN

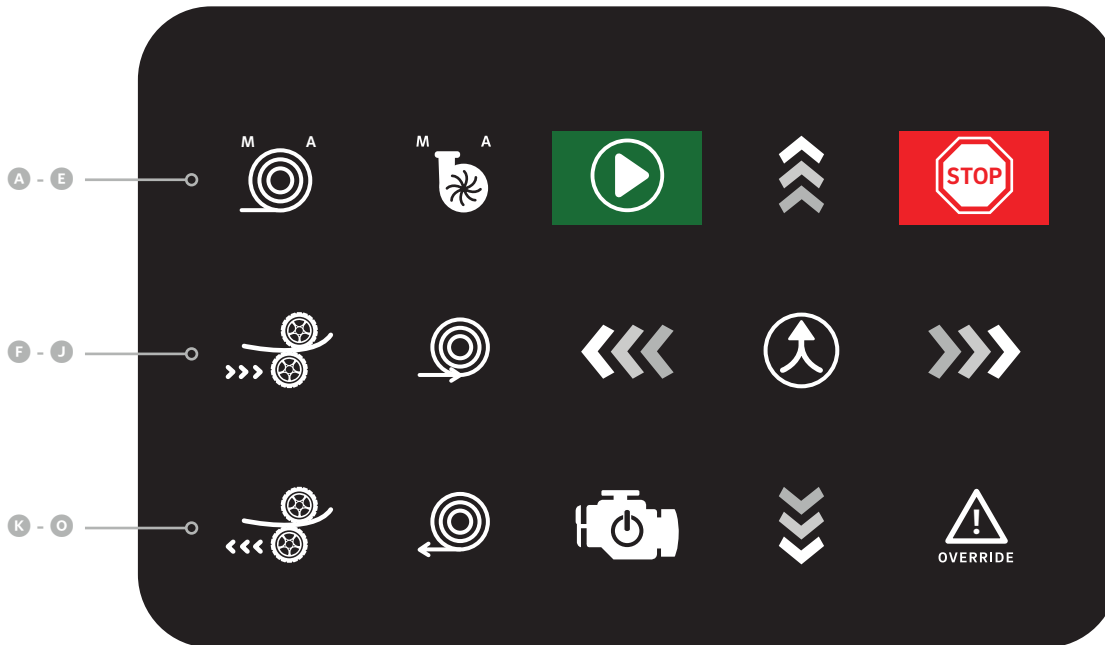

## TOP ROW ... LEFT TO RIGHT

- A HOSE AUTO/MANUAL:** “Manual” allows the operator to control the hose separately from what the machine controls would normally do in “auto” mode.
- B LIQUID AUTO/OFF:** “Off” allows the operator to stop the well pump separately from what the machine controls would do normally do in “auto” mode.
- C START/GO:** Allows the operator to start the machine on the task after they previously stopped it.
- D SPEED UP:** 3 speeds. Push 1 time for slow. Push a second time for medium. Push a third time for fast. Push a fourth time for slow.
- E ALL STOP:** Allows the operator to stop the machine. Press again to release the brake.  
**An alternative way to stop the machine is to push the UP or DOWN arrow that is opposite of the direction the machine is currently moving.**

## MIDDLE ROW ... LEFT TO RIGHT

- F DISPENSER IN:** Feed hose in.
- G REEL IN:** Put hose on the reel.
- H STEER LEFT:** Push to increase the steering angle to the left.
- I STEER STRAIGHT:** Push to return the steering angle to center from any angle left or right.
- J STEER RIGHT:** Push to increase the steering angle to the right.

## BOTTOM ROW ... LEFT TO RIGHT

- K DISPENSER OUT:** Feed hose out.
- L REEL OUT:** Take hose off the reel.
- M ENGINE START/STOP:** Start the engine if it’s not running... kill the engine if it is running.
- N SLOW DOWN:** 3 speeds. Push 1 time for slow. Push a second time for medium. Push a third time for fast. Push a fourth time for slow.
- O OVERRIDE:** Allows the operator to disregard machine errors and fix issues in manual control.  
**Be careful as the machine will ignore all safeties.**