

INSTRUCTIONS 360 UNDERCOVER®

If the 360 Y-DROP® base unit has not yet been installed, disregard Step 1 and begin with Step 2.

⊕ INSTALLATION

Figure 1

Step 1 Disconnect the 360 Y-DROP hose assembly (1) from the 360 Y-DROP base unit. Remove pin (2) and remove the base unit from the riser tube assembly.

Figure 2

Step 2 Install 360 UNDERCOVER by sliding its housing onto the riser tube from the bottom.

Step 3 Connect the 360 UNDERCOVER hose assembly (1).

Step 4 Route the 360 Y-DROP base unit hose assembly (2) through the 360 UNDERCOVER housing.

Figure 3

Step 5 Position 360 UNDERCOVER so that it is pointing straight forward with respect to your equipment. Tighten the nut marked (1) in Figure 3 and then the one marked (2).

Figure 4

Step 6 Install or re-install the 360 Y-DROP base unit and install pin (1).

Step 7 Connect hose assembly (2).

⊕ INSTALLATION COMPLETE.

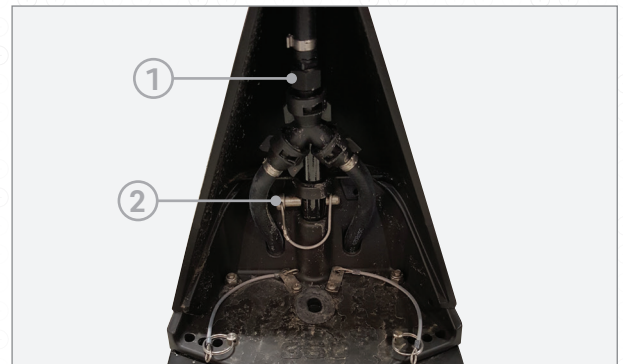


Figure 1

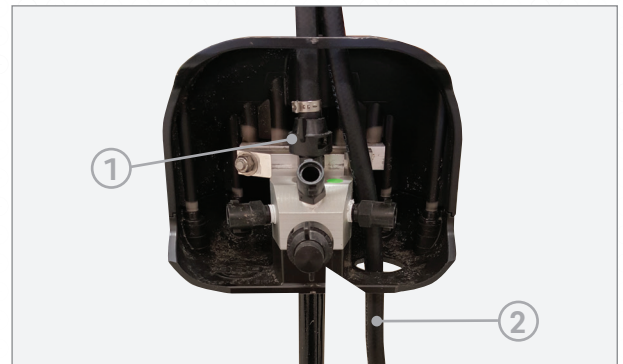


Figure 2



Figure 3

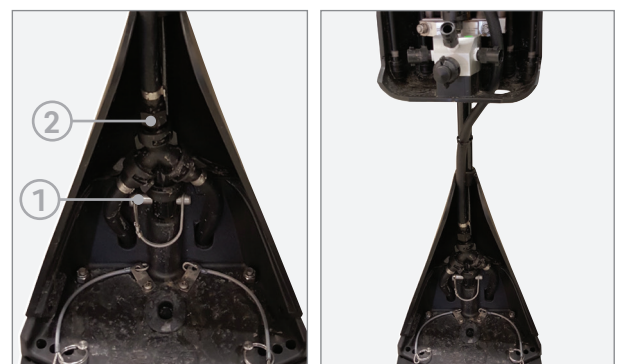


Figure 4

Figure 5