

# SADDLE BRACKET SUPPORT



## STEP 1


### REMOVE BOLT



Using a 16mm socket, remove the M12 bolt **1** second from the front of 360 BANDIT unit.

## STEP 2

### INSTALL SADDLE BRACKET SUPPORT

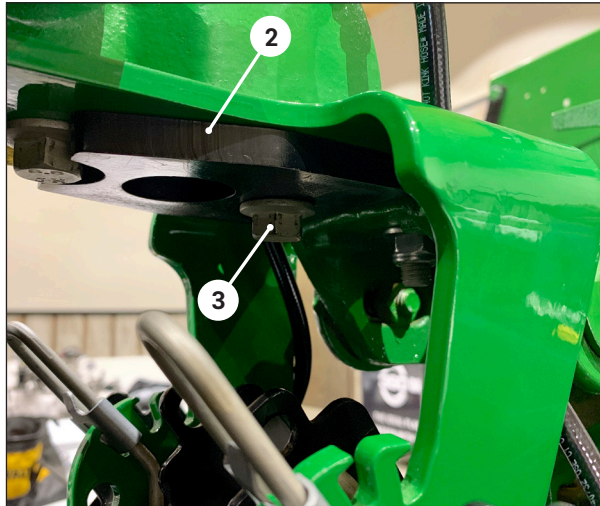

Place the saddle bracket support **2** on the underside of the 360 BANDIT unit and secure with the provided longer M12 bolt **3**.

Tighten with a 16mm socket.

## COMPLETE

### SADDLE BRACKET INSTALLATION COMPLETE



### NEED HELP?

Call our Product Support Team at 309-300-3120.