

SADDLE BRACKET SUPPORT



STEP 1


REMOVE BOLT



Using a 16mm socket, remove the M12 bolt **1** second from the front of 360 BANDIT unit.

STEP 2

INSTALL SADDLE BRACKET SUPPORT

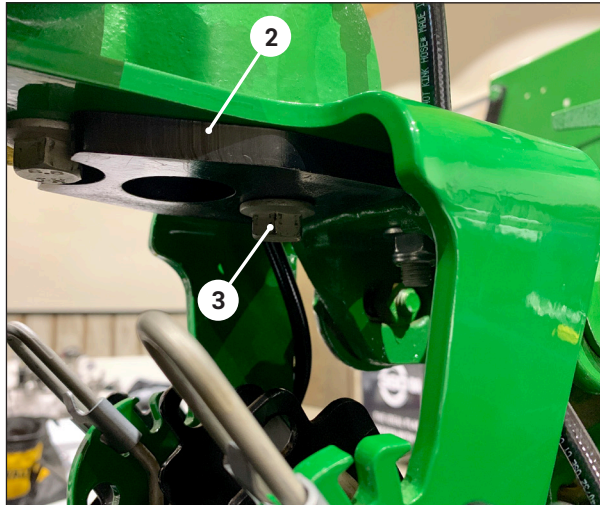

Place the saddle bracket support **2** on the underside of the 360 BANDIT unit and secure with the provided longer M12 bolt **3**.

Tighten with a 16mm socket. Torque bolts to 42.2 ft lbs. Do not over tighten bolts.

COMPLETE

SADDLE BRACKET INSTALLATION COMPLETE



NEED HELP?

Call our Product Support Team at 309-300-3120.