



ROCK GUARD KIT INSTALLATION

JOHN DEERE MAXEMERGE ONLY

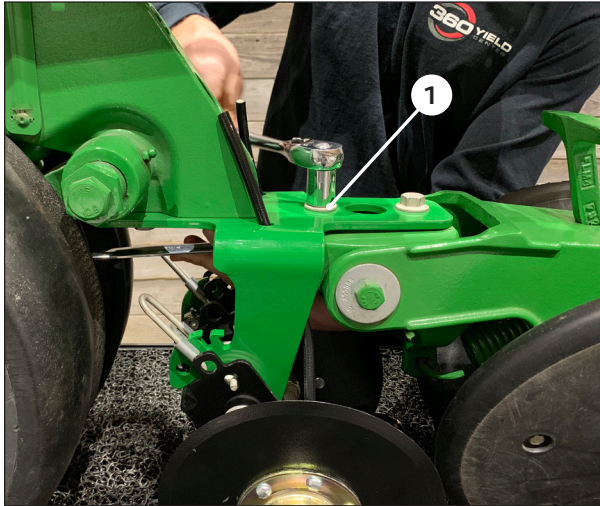

STEP 1 | REMOVE BOLT

Using a 16mm socket and 19mm wrench, remove the front bolt 1 that secures the 360 BANDIT to the closing system. The bolt, washer and nut can be discarded.

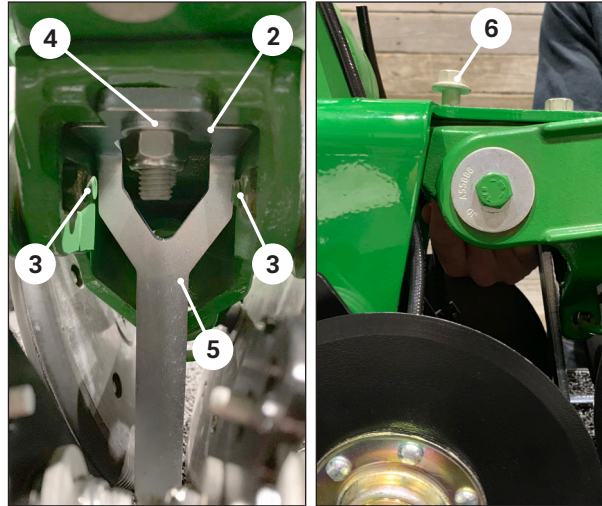

STEP 2 | INSTALL ROCK GUARD

From the underside, maneuver the rock guard 2 around the two side bolts 3 and align the rock guard bracket with the hole in the BANDIT bracket and closing system 4. Ensure the guard extension 5 is to the rear.

From the top, install the provided M12 x 50mm bolt 6 through BANDIT, closing system and rock guard.

Secure with provided washer and bolt. Tighten with a 16mm socket and 19mm wrench.



INSTALLATION COMPLETE

NEED HELP?

Call our Product Support Team at 888-512-4890.