



360 BANDIT™

ROCK GUARD INSTALLATION INSTRUCTIONS
JOHN DEERE 7000 • KINZE 2000 MODELS



360YIELDCENTER.COM

FOR QUESTIONS PLEASE CONTACT OUR
PRODUCT SUPPORT TEAM AT 309-300-3120

5.14.19 • V1




ROCK GUARD KIT INSTALLATION

JOHN DEERE 7000 • KINZE 2000



STEP 1 REMOVE BOLTS

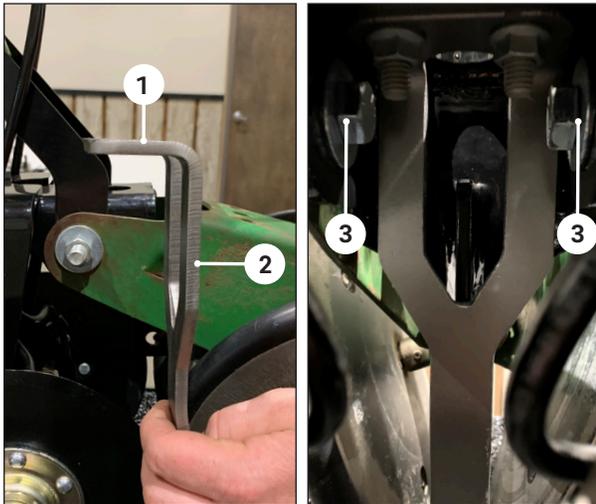

Orient the rock guard ① so that the guard extension ② is to the rear.

From the underside, maneuver the rock guard around the two side closing system bolts ③ and align the rock guard bracket with the holes in the 360 BANDIT extension bracket.

STEP 2 PLACE ROCK GUARD



From the top, install the (2) provided 3/8" bolts ④ through 360 BANDIT extension bracket and rock guard.

Secure with provided nut. Tighten with a 9/16" socket and wrench.

STEP 3 SECURE ROCK GUARD AND SUPPORT STRAP



INSTALLATION COMPLETE