



# 360 BANDIT™

ROCK GUARD INSTALLATION INSTRUCTIONS  
JOHN DEERE MAXEMERGE MODELS



[360YIELDCENTER.COM](http://360YIELDCENTER.COM)

FOR QUESTIONS PLEASE CONTACT OUR  
PRODUCT SUPPORT TEAM AT 309-300-3120

5.14.19 • V4

All trademarks are the property of 360 Yield Center, its affiliates and/or its licensors. ©2019 360 Yield Center. All rights reserved.


# ROCK GUARD KIT INSTALLATION

JOHN DEERE MAXEMERGE



## STEP 1


### REMOVE BOLT

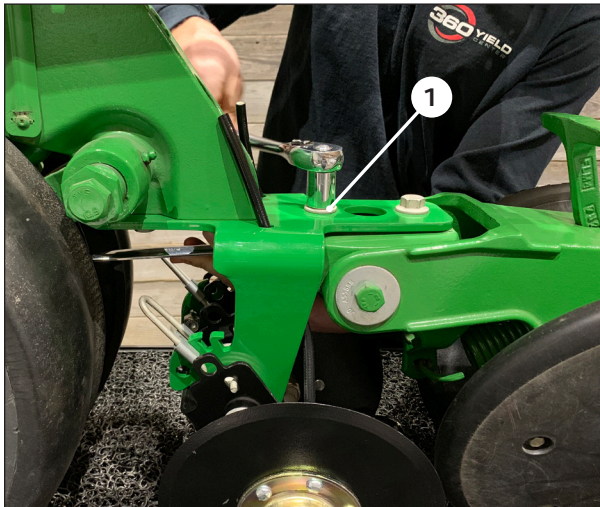

Using a 16mm socket and 19mm wrench, remove the front bolt **1** that secures the 360 BANDIT to the closing system. The bolt, washer and nut can be discarded.

## STEP 2


### INSTALL ROCK GUARD

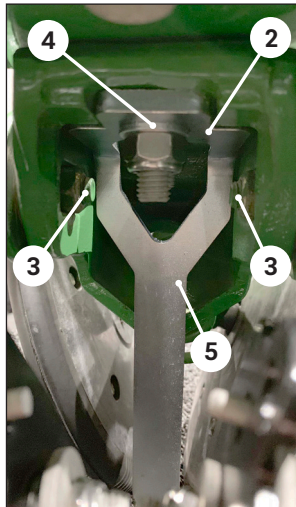

From the underside, maneuver the rock guard **2** around the two side bolts **3** and align the rock guard bracket with the hole in the BANDIT bracket and closing system **4**. Ensure the guard extension **5** is to the rear.

From the top, install the provided M12 x 50mm bolt **6** through BANDIT, closing system and rock guard.

Secure with provided washer and bolt. Tighten with a 16mm socket and 19mm wrench.

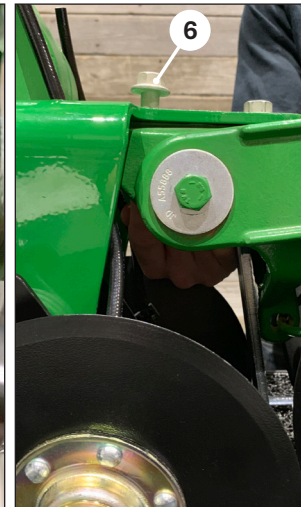

### INSTALLATION COMPLETE