



# 360 BANDIT™

ROCK GUARD INSTALLATION INSTRUCTIONS  
WHITE 9000 MODELS



[360YIELDCENTER.COM](http://360YIELDCENTER.COM)

FOR QUESTIONS PLEASE CONTACT OUR  
PRODUCT SUPPORT TEAM AT 309-300-3120

5.14.19 • V1




# ROCK GUARD KIT INSTALLATION

WHITE 9000




## STEP 1 REMOVE BOLT

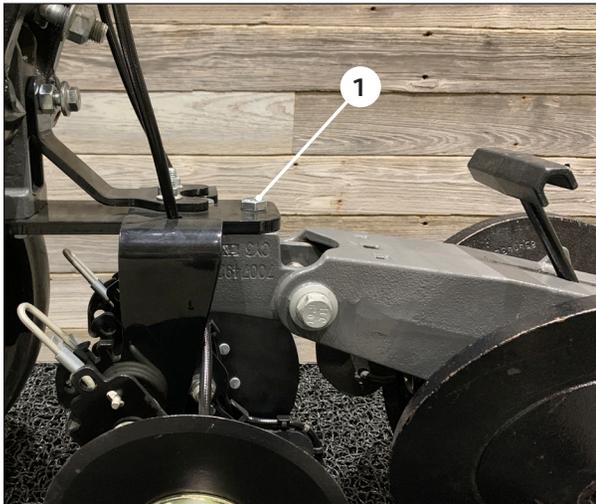


Using a 19mm socket and wrench, remove the rear bolt **1** that secures the 360 BANDIT to the closing system. The bolt and nut will be reused.

## STEP 2 INSTALL ROCK GUARD

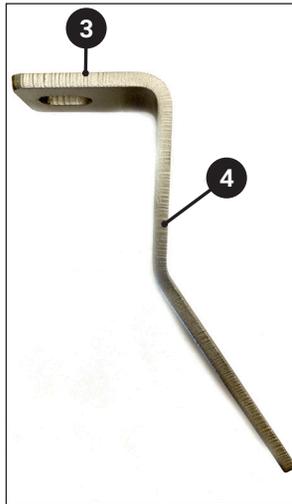

Orient the rock guard **3** so that the guard extension **4** is to the rear.

From the underside, maneuver the rock guard around the two side closing system bolts and align the rock guard bracket with the holes in the 360 BANDIT extension bracket.

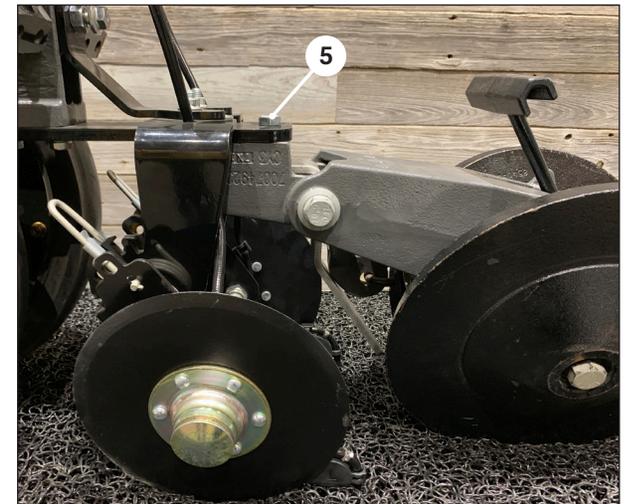

From the top, reinstall the bolt **5** through 360 BANDIT, closing system and rock guard.

Secure with provided nut. Tighten with a 19mm socket and wrench.

**INSTALLATION COMPLETE**