



# 360 BANDIT™

INSTALLATION INSTRUCTIONS  
KINZE 3000 MODELS



[360YIELDCENTER.COM](http://360YIELDCENTER.COM)

FOR QUESTIONS PLEASE CONTACT OUR  
PRODUCT SUPPORT TEAM AT 309-300-3120

1.3.20 • V5


# INSTALLATION INSTRUCTIONS

KINZE 3000



## BEFORE YOU BEGIN...

### HELPFUL TOOLS

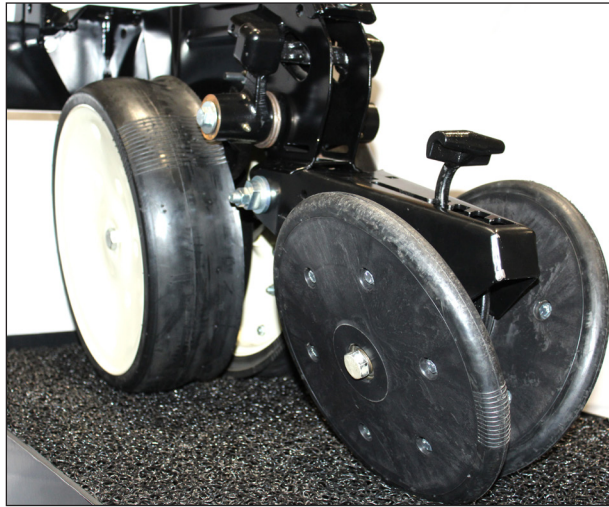

Hammer/Mallet



Wrench Sizes: 3/4", 9/16" and 15/16"

Socket Sizes: 3/4", 9/16" and 15/16"

Impact Driver/ Socket Wrench

## STEP 1

### REMOVE CLOSING WHEELS

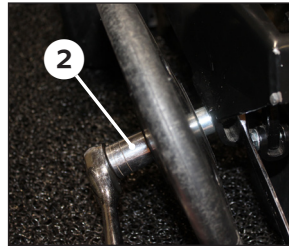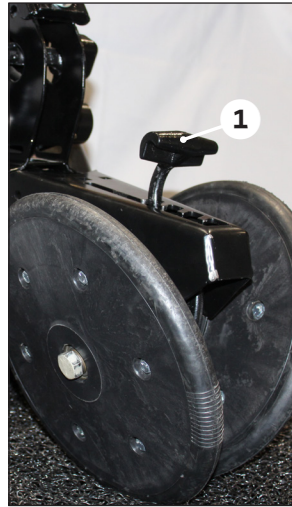

Release spring ① to remove tension from closing system.

Remove closing wheels with a 15/16" socket and wrench ②. Retain the closing wheels, bolts, and nuts for re-installation later in the instructions.

If present, remove insecticide attachment.


#### NOTES:

**Removal of the closing wheels is necessary to facilitate the ease of removing and reinstalling the spring.**

**If you are installing the optional chains kit, the bolts and nuts ③ can be discarded but the bushings ④ need to be kept.**

## STEP 2

### REMOVE CLOSING SYSTEM ARMS

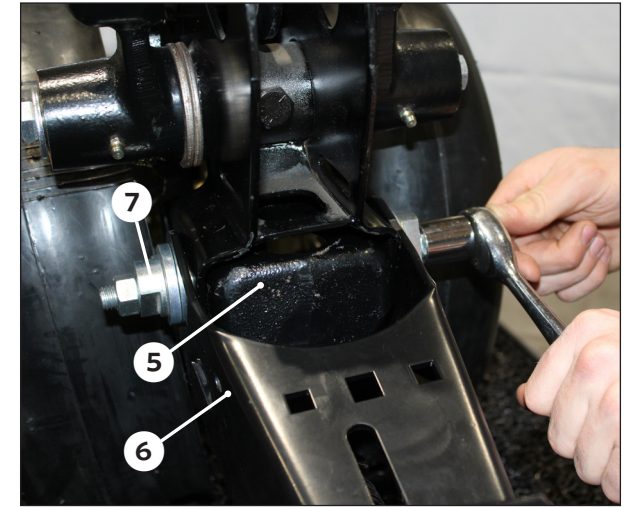

Using a 9/16" socket, remove the bolt that holds the closing wheel arm stop ⑤ to the row unit between the gauge wheels.

**NOTE: The gauge wheels may need to be held up to remove the bolt.**

Using a 3/4" socket remove the nut from the carriage bolt that secures the closing system arms on the row unit.

Remove carriage bolt and remove closing system arms ⑥ from the row unit. Discard carriage bolt, nut and washers. Retain two piece bushing ⑦.

Remove spring from closing wheel arm stop and set closing wheel arm stop to the side.

**NOTE: Retain closing wheel arm stop in a safe location for installation of closing system without 360 BANDIT.**


# INSTALLATION INSTRUCTIONS

KINZE 3000



## STEP 3


### INSTALL ROCK GUARD

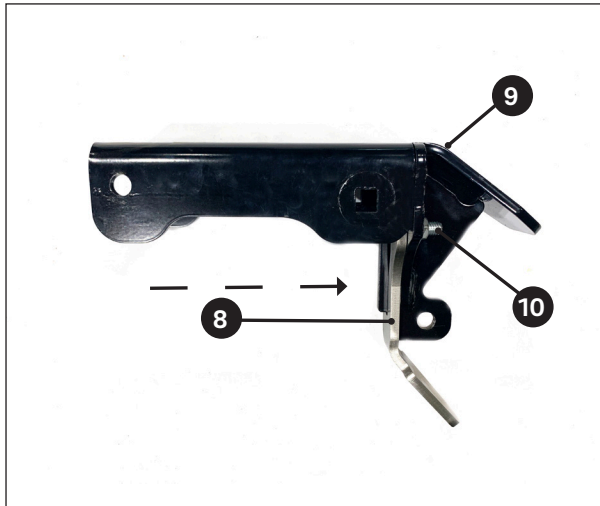

Attach the rock guard **8** to the underside of the extension bracket **9** using two bolts **10**. Secure with nut.

## STEP 4

### INSTALL BANDIT ARM ASSEMBLY

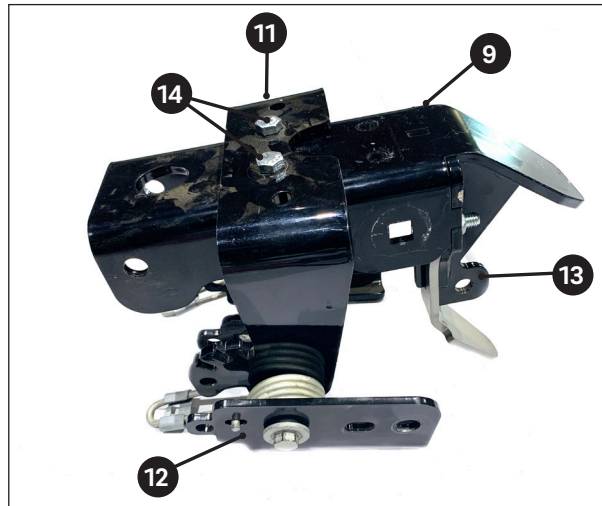


Slide the BANDIT arm assembly **11** over the extension bracket **9**, ensuring BANDIT arms **12** are facing in the rearward direction, towards the spring hook **13**.

Secure arm assembly to the front holes **14** on the extension bracket with (2) 3/8" X 1-1/2" bolts and 3/8" flange nuts.

Tighten with 9/16" socket and wrench.

## STEP 5

### INSTALL EXTENSION BRACKET

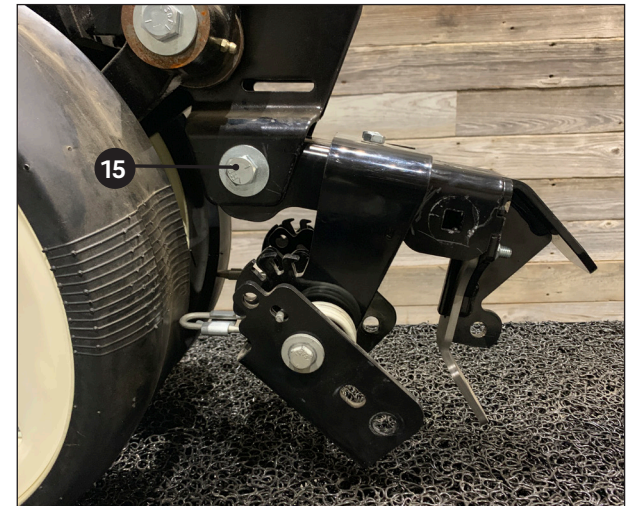

Align holes in extension bracket with the holes on the row unit **15**. Install flat washer on the 1/2" x 1-1/2" bolt from hardware kit #540615. Slide bolt through extension bracket and row unit hole (bolt head on the outside). Install another washer and hand tighten with nyloc nut from hardware kit #540615. Do not tighten.

**NOTE:** Leave nyloc nuts loose on both sides until after the support strap is installed in STEP 5.

Repeat for other side.




# INSTALLATION INSTRUCTIONS

## KINZE 3000



### STEP 6 INSTALL SUPPORT STRAP

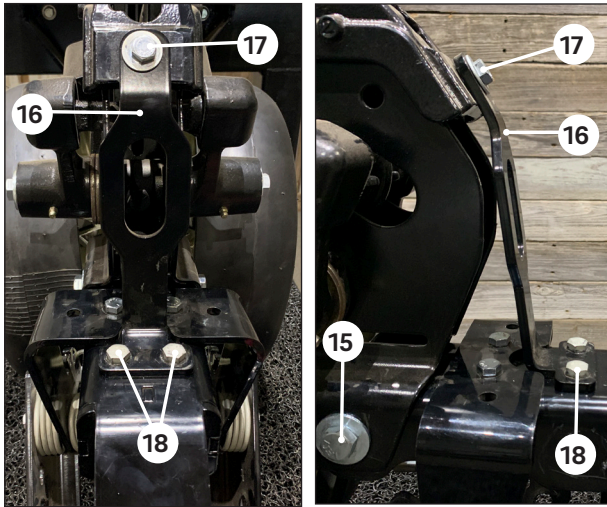

Remove the bolt on the bottom of the depth adjustment assembly and discard.


Secure the top of the support strap <sup>16</sup> to the depth adjustment assembly using the supplied 3/8" x 1-1/4" bolt and washer from hardware kit #540615 <sup>17</sup>. Ensure all bracketry is flush when bolt is installed.

Attach the support strap to the back holes on the extension bracket with (2) 3/8" x 1-1/4" bolts and 3/8" flange nuts from hardware kit #540615 <sup>18</sup>. Tighten bolts with 9/16" socket and wrench.

**NOTE: The extension bracket may need lifted up to align bolt holes. Tighten the bolt down until there is a flat connection between the support strap and the depth adjustment assembly.**

Tighten the nyloc nuts that were left loose in STEP 5 with 3/4" socket and wrench securing the BANDIT extension bracket to the row unit <sup>15</sup>.


### STEP 7 REINSTALL CLOSING SYSTEM

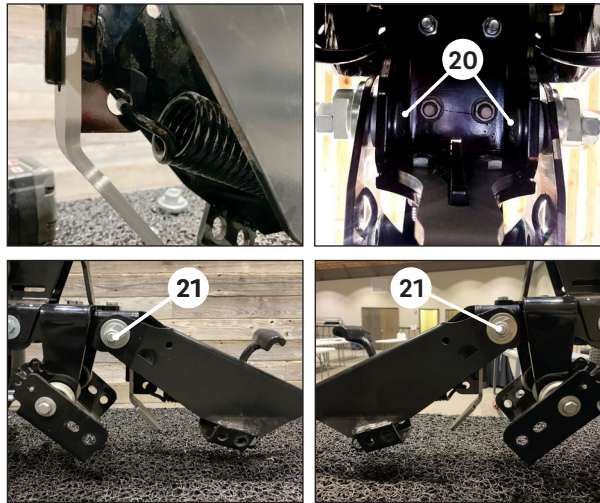

Attach the tensioning spring on the closing system to the spring hook on the BANDIT extension bracket <sup>19</sup>.

Align square holes in extension bracket with holes in closing system arms. From the inside to the outside, using the thick spacer washer (one per side), slide supplied 2-1/4" carriage bolt through all parts (carriage bolt head on the inside) <sup>20</sup>. Secure all parts with the previously set aside two-piece bushing and provided 1/2" nyloc nut <sup>21</sup>. Tighten with 1/2" socket. Adjust bushings according to OEM specs.

### STEP 8 PREPARE HOSE GUIDES

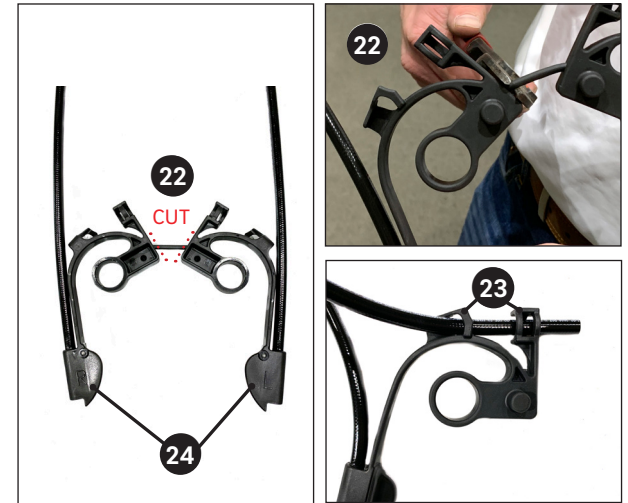

Using side-cutters, cut the two hose guides apart <sup>22</sup>.

Route the hose through the top two holes in the hose guide <sup>23</sup>.

Hose guides are labeled "L" left and "R" right <sup>24</sup>.

**NOTE: When installing hoseguides on the row unit, left and right are determined from the operators seat.**





# INSTALLATION INSTRUCTIONS

## KINZE 3000



### STEP 9

#### INSTALL DISK ASSEMBLY

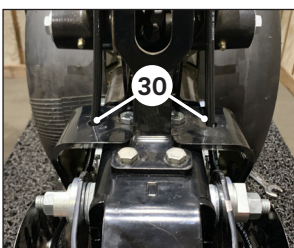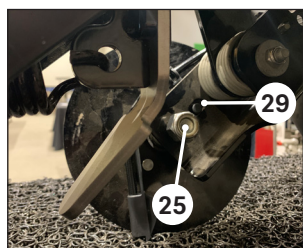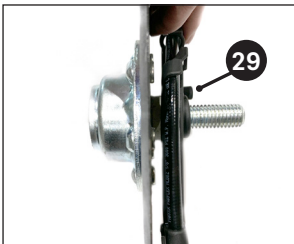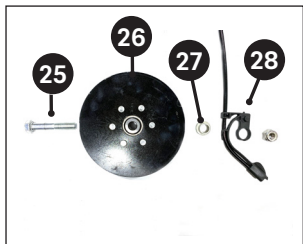

Insert 5/8" X 3" bolt **25** through the disk **26**. Insert bushing **27** (large side first) and hose guide assembly **28** (ear tab **29** facing in).

Slide bolt of the disk assembly into the lower hole on the bandit **25**, aligning the ear tab **29** with corresponding upper hole and secure with lock nut.

Tighten with 15/16" socket and wrench.

Using a mallet, install provided dust caps over disk bolt heads.

Route application hose through hole in top of 360 BANDIT frame **30**.



Repeat for other side.

Using 15/16" socket and wrench, reinstall closing wheels.

**NOTE: If the optional Chain Kit is being installed, do not reinstall the closing wheels.**

### STEP 10

#### ASSEMBLE PLUMBING

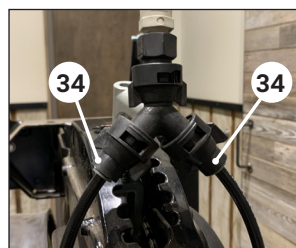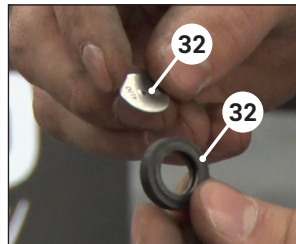

Install orifice plates **31** in the rubber grommets **32**.

Assemble plumbing components in the arrangement shown above **33**.

Attach the plumbing assembly to each of the hoses coming from the house guides **34**.

**NOTE: If hoses are not fully seated in the push to connect, they will leak. Hoses seat 7/8" of an inch deep or until you hear a snap.**

The supplied push to connect adapter in the 360 BANDIT kit connects to 3/8" push to connect compatible hose.

Secure hoses to row unit with provided zip ties.

### INSTALLATION COMPLETE



#### PLUMBING RECOMMENDATIONS:

To prevent excess fertilizer from dribbling out of the hoses when product application is shut off, install one push to connect polypropylene (Inlet x Outlet) 3/8" O.D. check valve (not included) in the plumbing to each row prior to the 360 BANDIT orifices. Check valve is available at Dultmeier Sales (Item #BUCV1103-P38).

A 50 mesh strainer (not included) can be used in the complete plumbing system between tanks and 360 BANDIT to help prevent debris from blocking orifices.

