



# 360 BANDIT™

UPDATED SUPPORT STRAP  
WHITE 9000 MODELS



[360YIELDCENTER.COM](http://360YIELDCENTER.COM)

FOR QUESTIONS PLEASE CONTACT OUR  
PRODUCT SUPPORT TEAM AT 309-300-3120

3.12.20 • V1

# INSTALLATION INSTRUCTIONS

## UPDATED SUPPORT STRAP - WHITE 9000



### WHY UPDATE THE SUPPORT STRAP?




We have developed a different style of support bracket for BANDITS on White planters. This bracket provides more support for the closing system than the bracket provided with your BANDIT system last year.

If you have already fully installed your 360 BANDIT units on your planter, please follow these instructions to replace last years support strap with this new one.

### STEP 1


#### REMOVE OLD SUPPORT STRAP

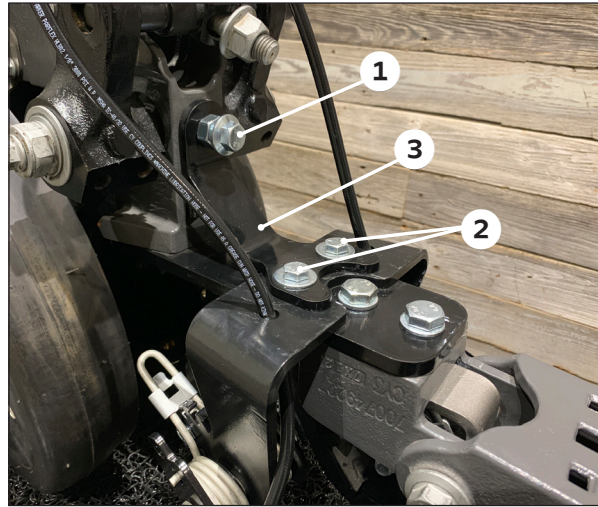

Remove the stop bolt **1** and the remaining (2) 3/8" x 1-1/2" bolts and 3/8" flange nuts **2** that secure the support strap **3** to the row unit and BANDIT arm assembly. Retain the (2) 3/8" x 1-1/2" bolts and 3/8" flange nuts.

### STEP 2

#### RESECURE BANDIT ARM ASSEMBLY

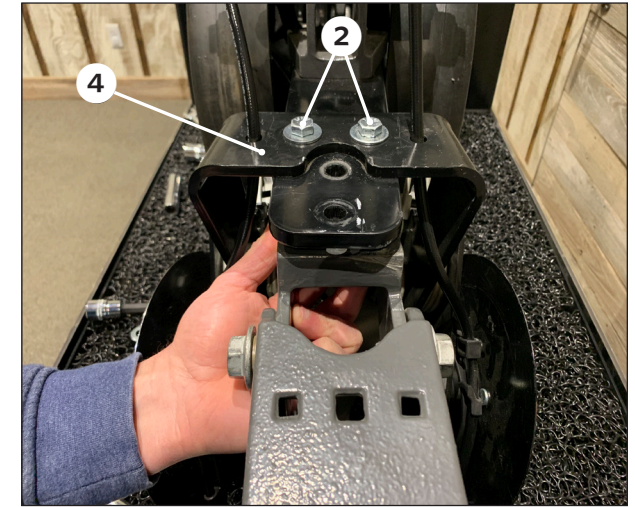

Keeping the BANDIT arm assembly in place **4** over the extension bracket and ensuring the BANDIT arms are facing the rearward direction, reattach the BANDIT arm assembly to the extension bracket using the (2) 3/8" x 1-1/2" bolts and 3/8" flange nuts **2** that were removed in the previous step.


# INSTALLATION INSTRUCTIONS

WHITE 9000



## STEP 3

### INSTALL BANDIT ARM ASSEMBLY & SUPPORT STRAP

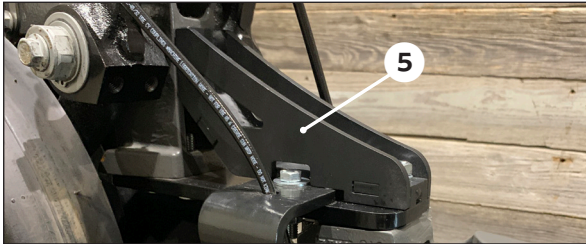


Place the new BANDIT support bracket **5** on top of the BANDIT extension bracket.

Using one of the longer bolts and a nyloc nut provided, attach the new support bracket and closing system to the second to last back hole in the BANDIT extension bracket **6**. The bolt should be inserted from the top and go through the support strap, extension bracket and then the closing system.

## STEP 4

### RE-INSTALL CLOSING SYSTEM

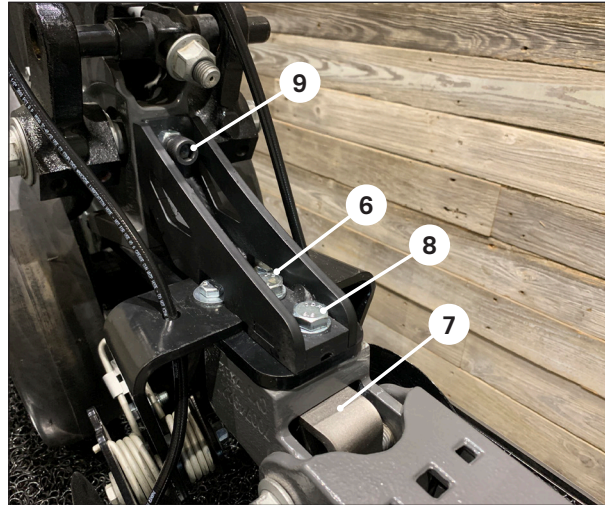

From the underside, maneuver the rock guard **7**, with the guard extension to the rear, around the two side closing system bolts and align the rock guard bracket with the rear most hole in the 360 BANDIT extension bracket.

From the top, install the provided bolt **8** through the new support bracket, extension bracket, closing system and rock guard. Secure with provided nut and tighten both bolts with 19 mm socket. Torque bolts to 42.2 ft lbs. **Ensure not to over tighten bolts.**

Thread the nut onto set screw. Install the set screw and nut in to top hole of the new support strap **9** and tighten the screw all the way down into threaded hole. Finally, tighten jam nut against support brace using socket.

## UPDATE COMPLETE

