

360 WAVE

360

— : —



# 360 WAVE™

INSTALLATION INSTRUCTIONS  
JOHN DEERE MAXEMERGE MODELS  
WITH 360 BANDIT



[360YIELDCENTER.COM](http://360YIELDCENTER.COM)

FOR QUESTIONS PLEASE CONTACT OUR  
PRODUCT SUPPORT TEAM AT 309-300-3120

3.11.20 • V2

All trademarks are the property of 360 Yield Center, its affiliates and/or its licensors. ©2020 360 Yield Center. All rights reserved.

# INSTALLATION INSTRUCTIONS

## JOHN DEERE MAXEMERGE WITH BANDIT



### STEP 1

#### PREPARE THE ROW UNIT




#### Please note before you begin:

If you are installing 360 WAVE on a 2019 or older BANDIT unit you will need to update the BANDIT bracket **1** before installing your 360 WAVE units. (Your BANDIT bracket must look like the one in the picture above to be compatible with 360 WAVE.)

Remove both gauge wheels and the right-side opening disk **2**.

### STEP 2


#### INSTALL WAVE MOUNTING BRACKET

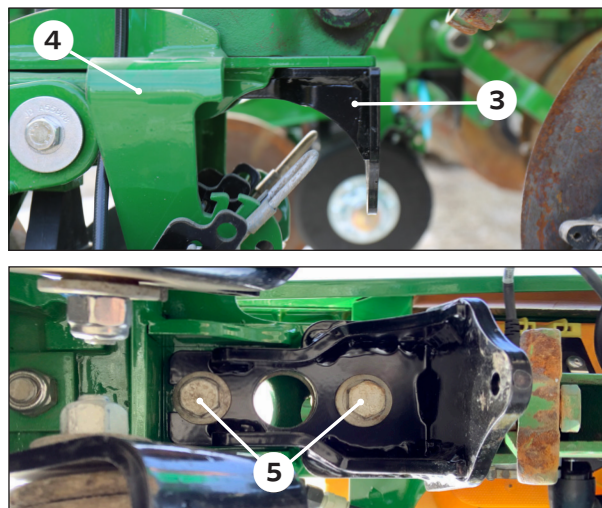

Install the WAVE mounting bracket **3** on to the BANDIT bracket **4** using the (2) bolts provided **5**.

### STEP 3

#### INSTALL WAVE ASSEMBLY

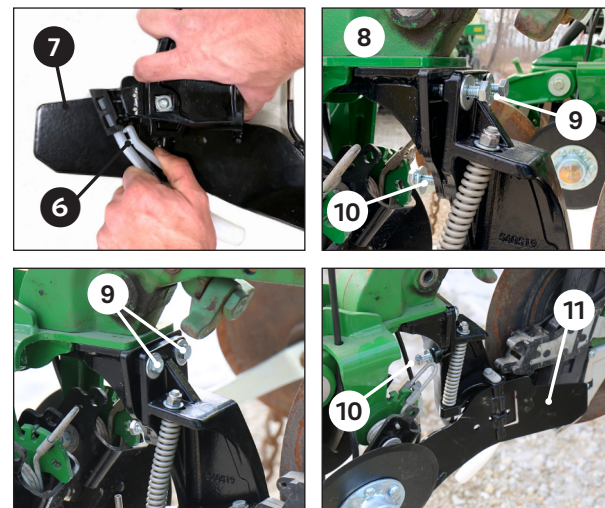

Install firmer **6** on the wave assembly **7** by pinching the top of the firmer together and slide it into place.

Install the WAVE assembly on the WAVE mounting bracket using the provided hardware **8**. Two bolts will be inserted on the front **9** and one on the back **10** of the assembly.

**NOTE:** When installing the WAVE assembly ensure the blade trash guard is flush against the seed tube protector **11**.


# INSTALLATION INSTRUCTIONS

## JOHN DEERE MAXEMERGE WITH BANDIT



### STEP 3

#### INSTALL PLUMBING

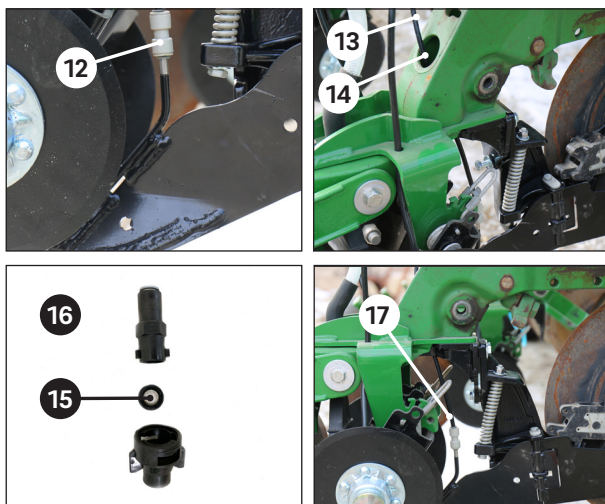

Install the push-to-connect fitting **12** on the liquid tube on WAVE assembly.

Route the 1/4" push-to-connect line **13** through the hole **14** on the row unit and connect it to the push-to-connect fitting just installed.

Assemble the orifice into the rubber grommet **15**.

Assemble the three plumbing components in the arrangement shown above **16**.

Attach the plumbing assembly to the other end of the 1/4" line **17**. Secure the line to the row unit using zip ties as you see fit.

### STEP 4

#### REINSTALL GAUGE WHEELS AND DISK



Reinstall right side disk and both gauge wheels using original hardware **18**.

### INSTALLATION COMPLETE

