



# 360 BANDIT™

HEAVY DUTY ROCK GUARD  
INSTALLATION INSTRUCTIONS  
JOHN DEERE MODELS



[360YIELDCENTER.COM](http://360YIELDCENTER.COM)

FOR QUESTIONS PLEASE CONTACT OUR  
PRODUCT SUPPORT TEAM AT 309-300-3120

3.8.21 • V2




# HEAVY DUTY ROCK GUARD

JOHN DEERE



## STEP 1


### REMOVE BOLT

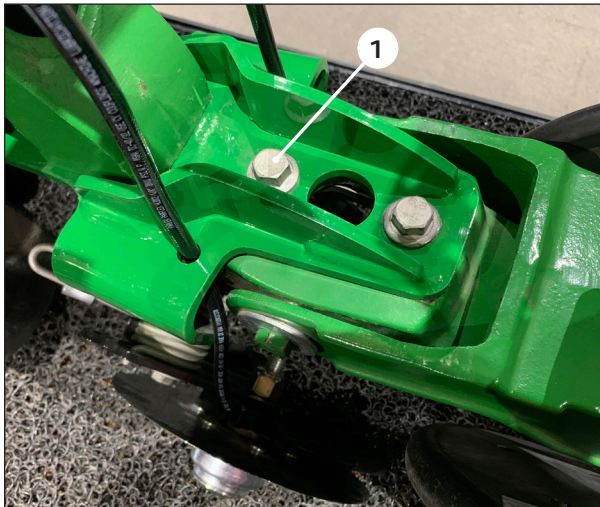

Using a 16mm socket and 19mm wrench, remove the front bolt **1** that secures the 360 BANDIT to the closing system. The hardware should be retained as it will be reused.

## STEP 2

### INSTALL ROCK GUARD

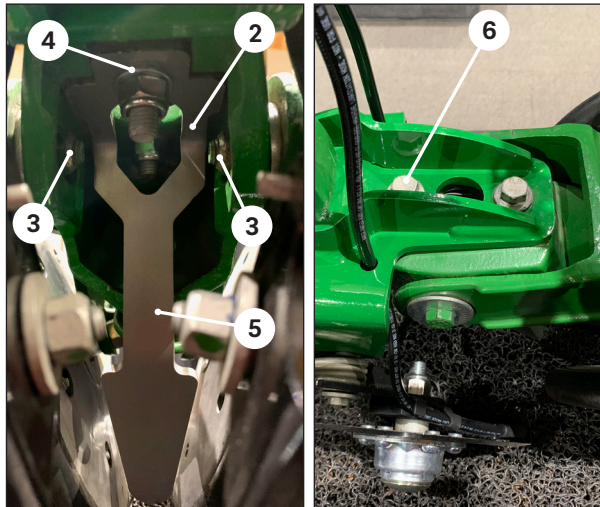

From the underside, maneuver the rock guard **2** around the two side bolts **3** and align the rock guard bracket with the hole in the BANDIT bracket and closing system **4**. Ensure the guard extension **5** is to the rear.

**NOTE: If the rock guard will not fit past side bolts, you may need to remove one side nut get rock guard in place then reinstall nut on side bolt.**

From the top, re-install the bolt **6** through BANDIT, closing system and rock guard.

Secure with washer and nut. Tighten with a 16mm socket and 19mm wrench.



### INSTALLATION COMPLETE