



# 360 BANDIT™

INSTALLATION INSTRUCTIONS  
JOHN DEERE 7000 & KINZE 2000 MODELS



[360YIELDCENTER.COM](http://360YIELDCENTER.COM)

FOR QUESTIONS PLEASE CONTACT OUR  
PRODUCT SUPPORT TEAM AT 309-300-3120

3.10.21 • V10

All trademarks are the property of 360 Yield Center, its affiliates and/or its licensors. ©2019 360 Yield Center. All rights reserved.

# INSTALLATION INSTRUCTIONS

JOHN DEERE 7000 & KINZE 2000



## BEFORE YOU BEGIN...

### HELPFUL TOOLS



Hammer/Mallet


Wrench Sizes: 3/4", 9/16" and 15/16"

Socket Sizes: 3/4", 9/16" and 15/16"

Impact

## STEP 1

### REMOVE CLOSING SYSTEM

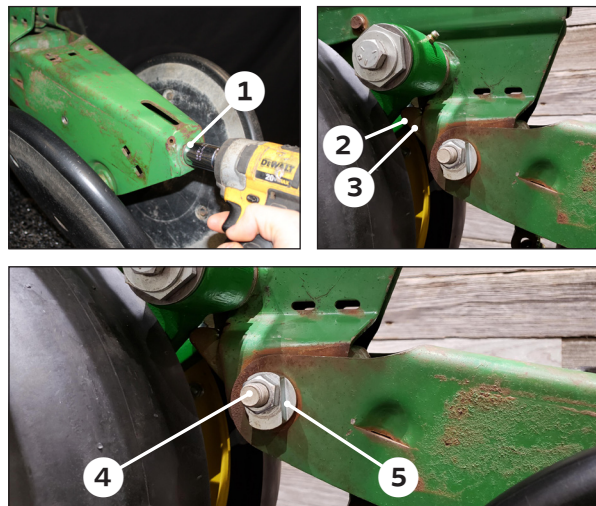

Using a 3/4" socket, withdrawal the tensioning bolt **1** from the spring.

Using a 9/16" socket remove the bolt **2** that holds the top of the closing wheel arm stop **3** to the row unit.

**NOTE:** Gauge wheels may need to be held up while removing the bolt.


Using a 3/4" socket and wrench remove bolts **4** holding closing system on. Keep the bushing **5** and discard the bolts, washers, and nuts.

Remove spring from closing wheel arm stop and if not already, disengage from the closing system.

**NOTE:** Retain closing wheel arm stop and hardware in a safe location for installing closing wheels without 360 BANDIT.

## STEP 2

### INSTALL ROCK GUARD

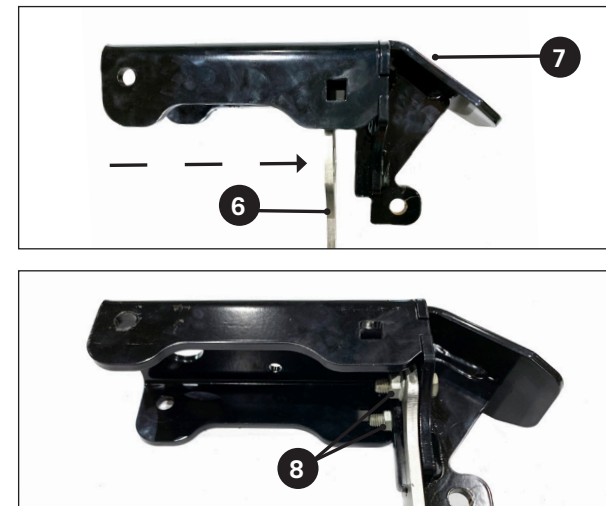

Attach the rock guard **6** to the underside of the extension bracket **7** using two bolts **8**. Secure with nut.


# INSTALLATION INSTRUCTIONS

JOHN DEERE 7000 & KINZE 2000



## STEP 2

### ASSEMBLE BANDIT ARM & EXTENSION BRACKET

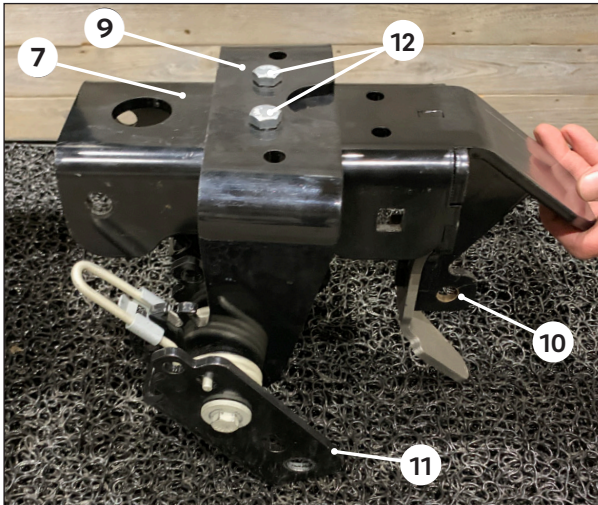


Slide the BANDIT arm assembly **9** over the extension bracket **7**. Ensure BANDIT arms **10** are facing in the rearward direction towards the spring hook **11**.

Secure arm assembly to the front holes **12** on the extension bracket with (2) 3/8" x 1-1/2" bolts and 3/8" flange nuts.

Tighten with 9/16" socket and wrench.

## STEP 3

### INSTALL EXTENSION BRACKET ASSEMBLY

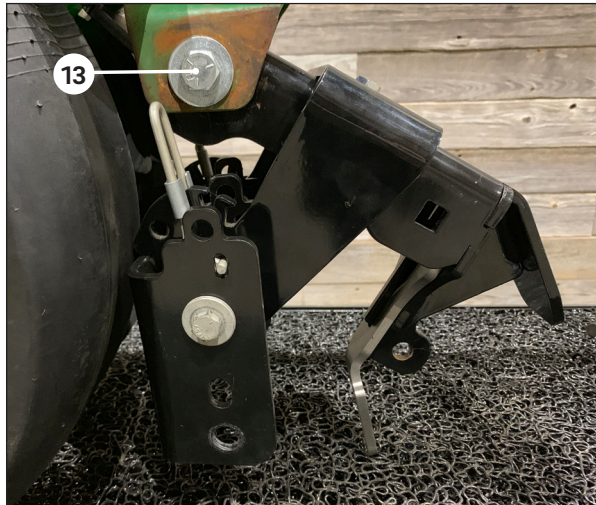


Align holes in extension bracket with the holes on the row unit. Install flat washer on 1/2" x 1-1/2" bolt from hardware kit #540615. Slide bolt through extension bracket and row unit hole (bolt head on the outside) **13**. Install another washer and hand tighten with nyloc nut from hardware kit #540615. Do not tighten.

**NOTE:** Leave nyloc nuts loose on both sides until after the support strap is installed in STEP 5.

Repeat on other side.

## STEP 4

### INSTALL SUPPORT STRAP

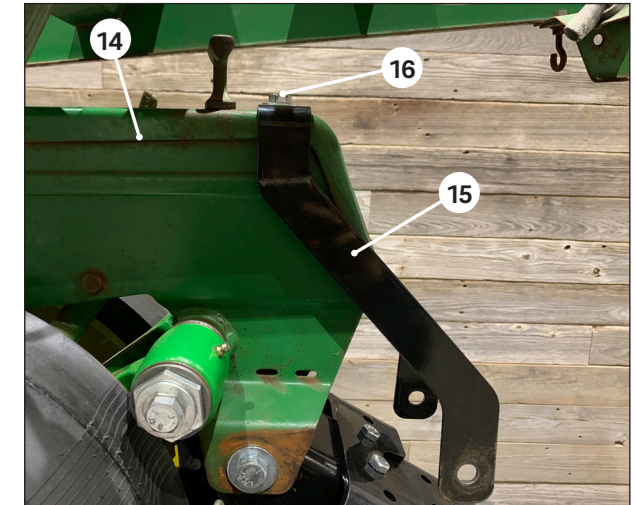

Using a 9/16" socket, remove the bolt from the top of the depth adjustment assembly **14** and discard.

Secure the top of the support strap **15** to the depth adjustment assembly using the supplied 3/8" x 1-1/4" bolt **16** and washer from hardware kit #540615. Ensure all bracketry is flush when bolt is installed.







